

SOLIMAR FLUIDIZER EXTERNAL INSTALLATION TOOL



1. Gain access to the outlet of the bin or silo (typically by removing discharge valve or diverter).
2. Connect install tool and tool lead to the install cable via the quick connect clip.
3. Thread the tool and cable (from the outside) into the install hole on the silo, feeding enough cable to allow the tool to exit the discharge outlet.
4. Thread the Fluidizer or Fluidizer plug onto the install tool and tighten to finger tightness only.
5. Pull the cable back through the install hole and seat the plug in the hole.
6. While holding onto tool lead, disconnect the install cable at the quick connect clip.
7. While continuing to hold tool lead, thread the washer (1st) and the nut (2nd) onto the tool lead over the install tool and fasten to the plug.
8. Remove the install tool.
9. Tighten to the specified fluidizer torque of 25 ft. lbs [35 Nm].

