




# Lid Valve Upgrade-Kit Install Procedure

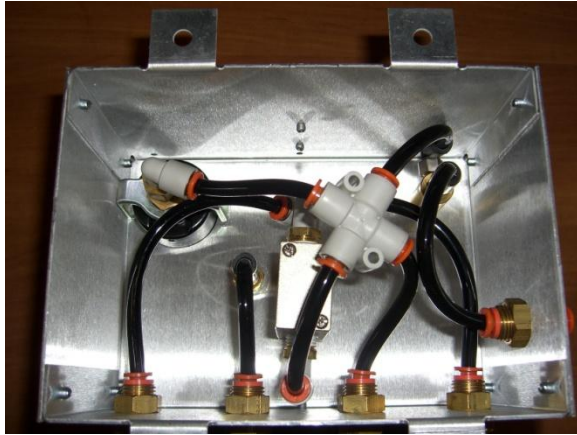

This is a view of the control box prior to the upgrade install, you will be adding additional airline; (yellow) from control box to Auto Lid.

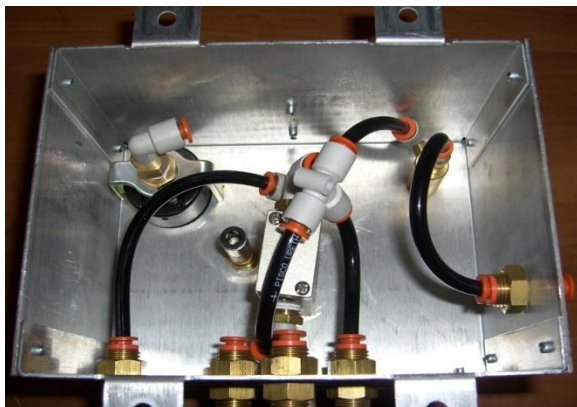


Remove the cross fitting as shown and reconnect with the tee fitting. We are no longer using the lid close indicator that will remain without a tube attached. Remove the bulkhead fitting to the green airline and save for later placement.

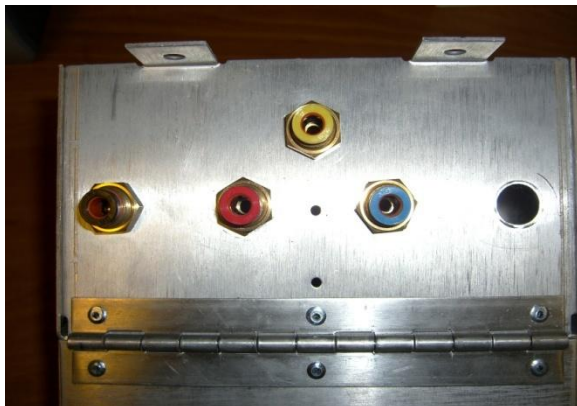


A 9/16 inch hole needs to be drilled as shown for the new yellow airline placement. You will receive a new fitting for the green line with the kit.

# Lid Valve Upgrade-Kit Install Procedure


This is the completed view of you install. Once tubing size is cut to length simply sip tie pilot valve and other fittings securely inside the box.

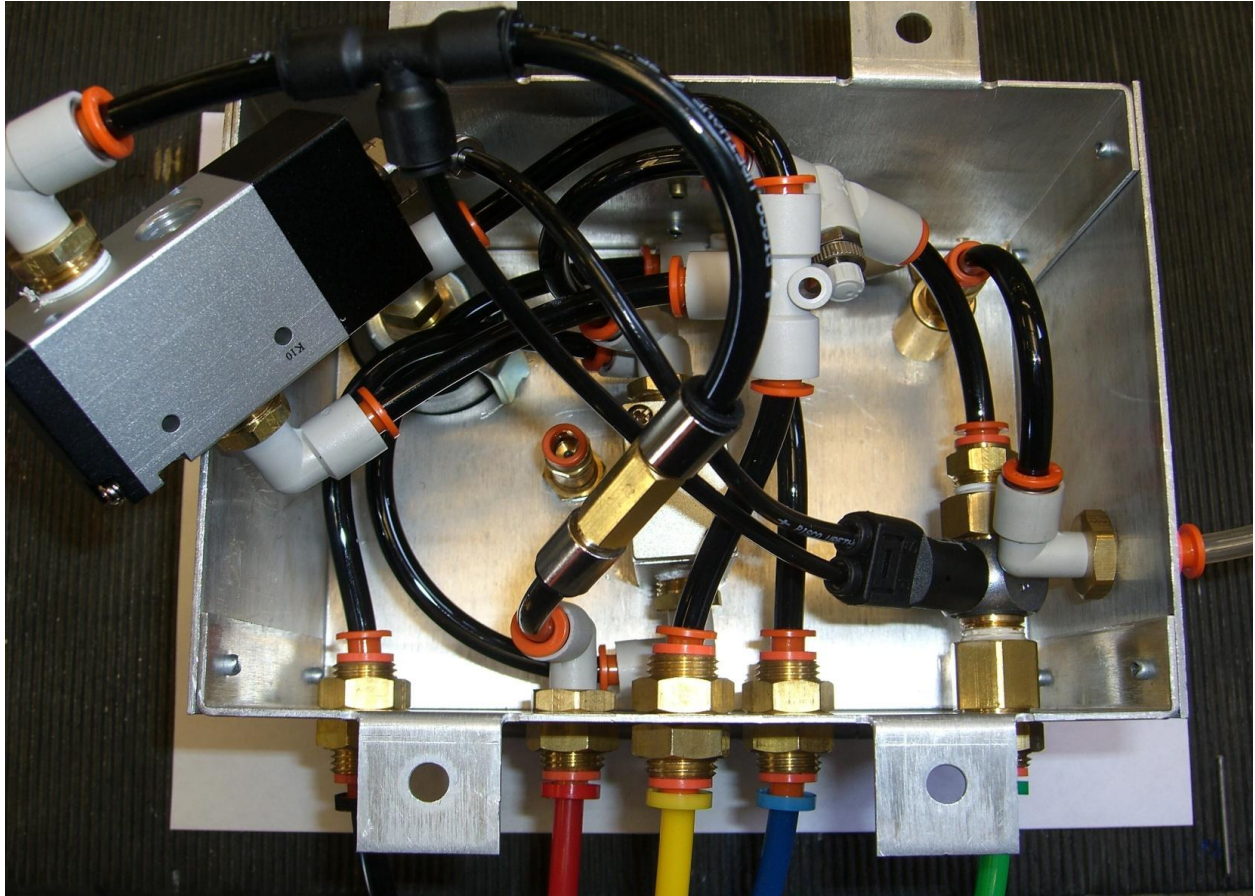

## Lid Valve Upgrade-Kit Install Procedure

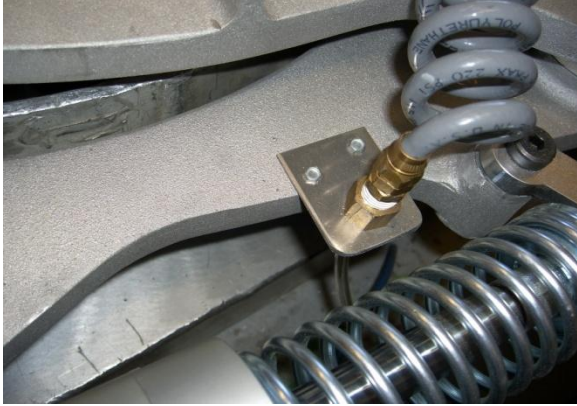

Install the provide bracket where the old pilot valve existed on the lid bottom ring. Reattach coiled airline to provided fitting. This is where the yellow airline will be attached.

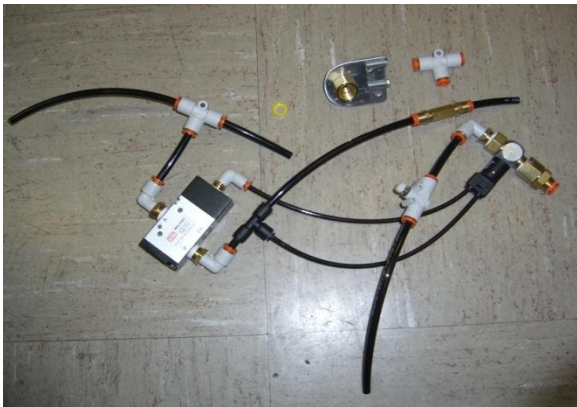

This is how you will receive your upgrade-kit, with tubing and fittings, two of which are directional. You may need to trim tubing to fit. Be sure to make clean 90 degree cuts on tubing.